

UCC3972	NO INTERNAL VOLTAGE CLAMP
UCC3973	INTERNAL VOLTAGE CLAMP LIMITS TRANSFORMER VOLTAGE AT START-UP OR DURING FAULT



