

Spare Part Replacement



General Information and Warnings

Please make sure to be complete following operations before disassembling DS or IFPD:

1. Close operating system and pull the power plug.
2. Close all system and peripherals.
3. Remove AC power and all signal cables.



If device is running do not disassemble the device for part replacement.



4. Use grounding wrist strap .
5. Obey ESD conditions.
6. Do not use sharp-tipped pen while cleaning touch screen and its glass

CHANGING OPS MODULE & INTERNAL USB



RE-CONNECTING THE OPS MODULE

Cooler must look to backside of the product




OPS Fan which is located on the OPS module must be at same side with ventilation holes on the back cover.



This label shows how connect the ops module on products.

REMOVE BACK COVER

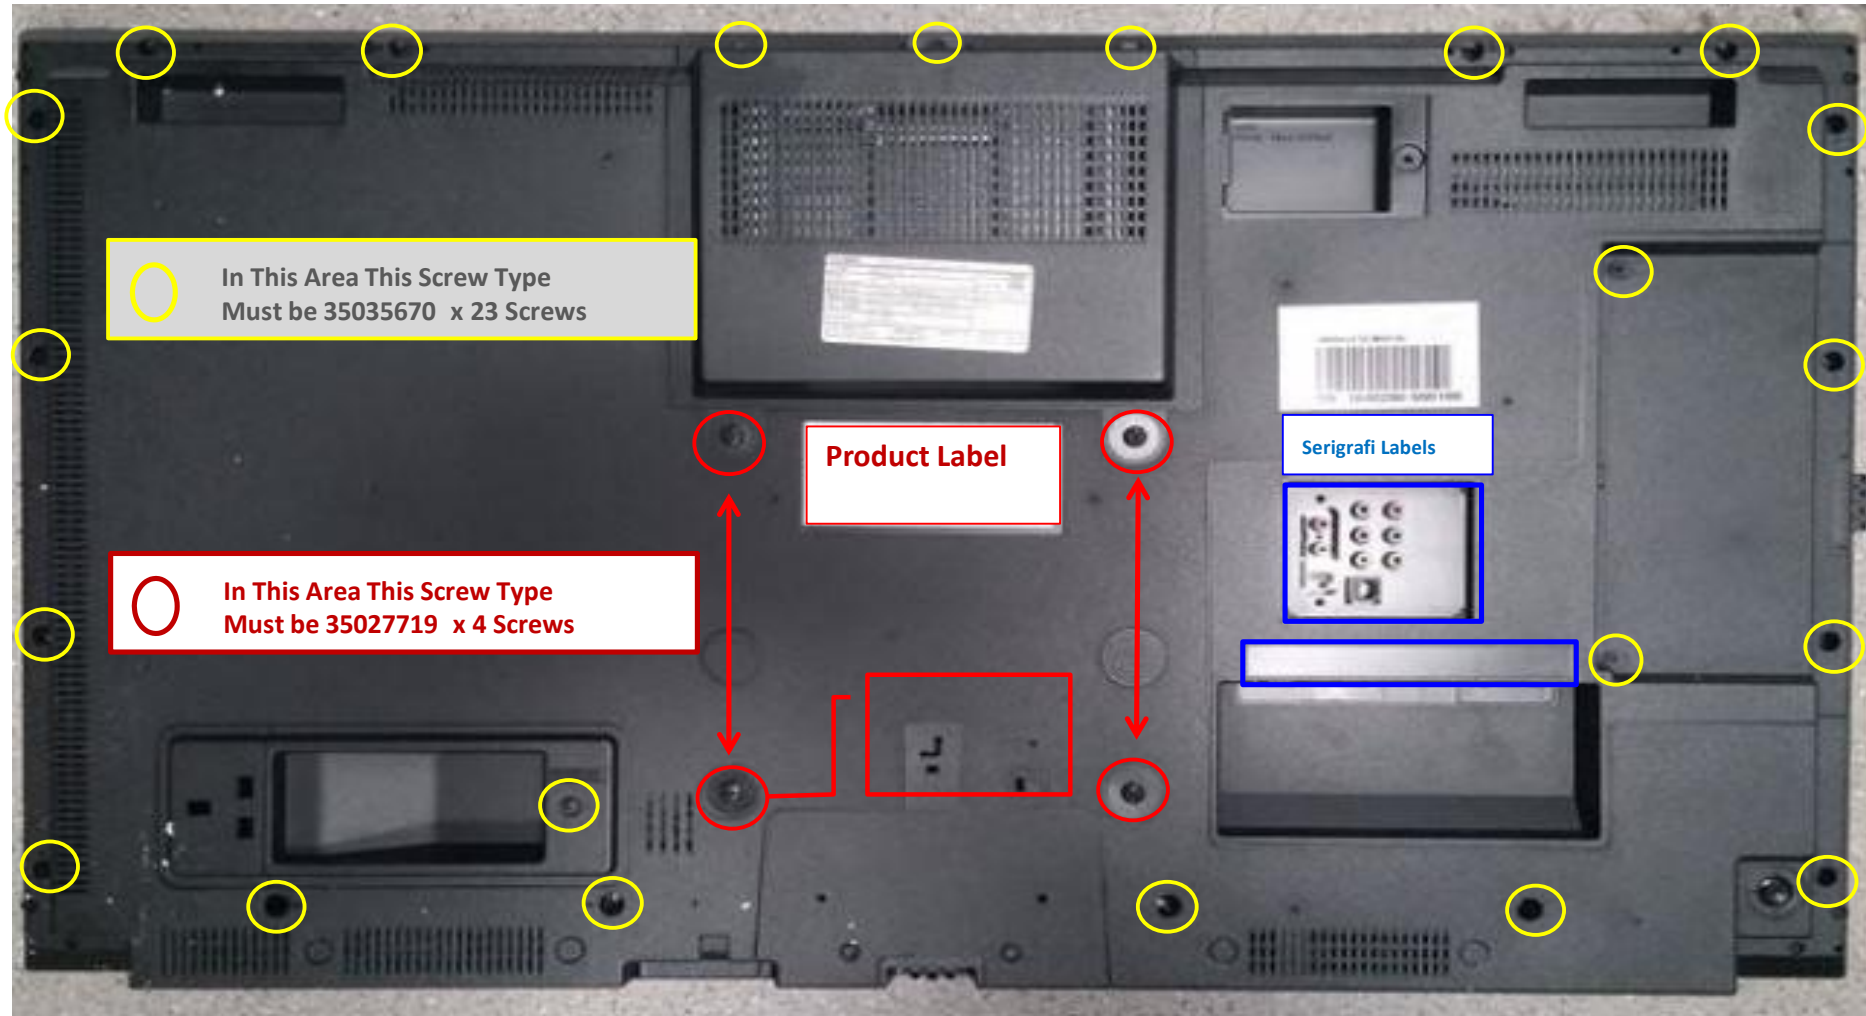

REMOVE BACK COVER



In This Area This Screw Type
Must be 35033266 x 7 Screws




Logo Plate



In This Area This Screw Type
Must be 35031414 x 1 Screw (Logo Plate)

CHANGE BOARDS

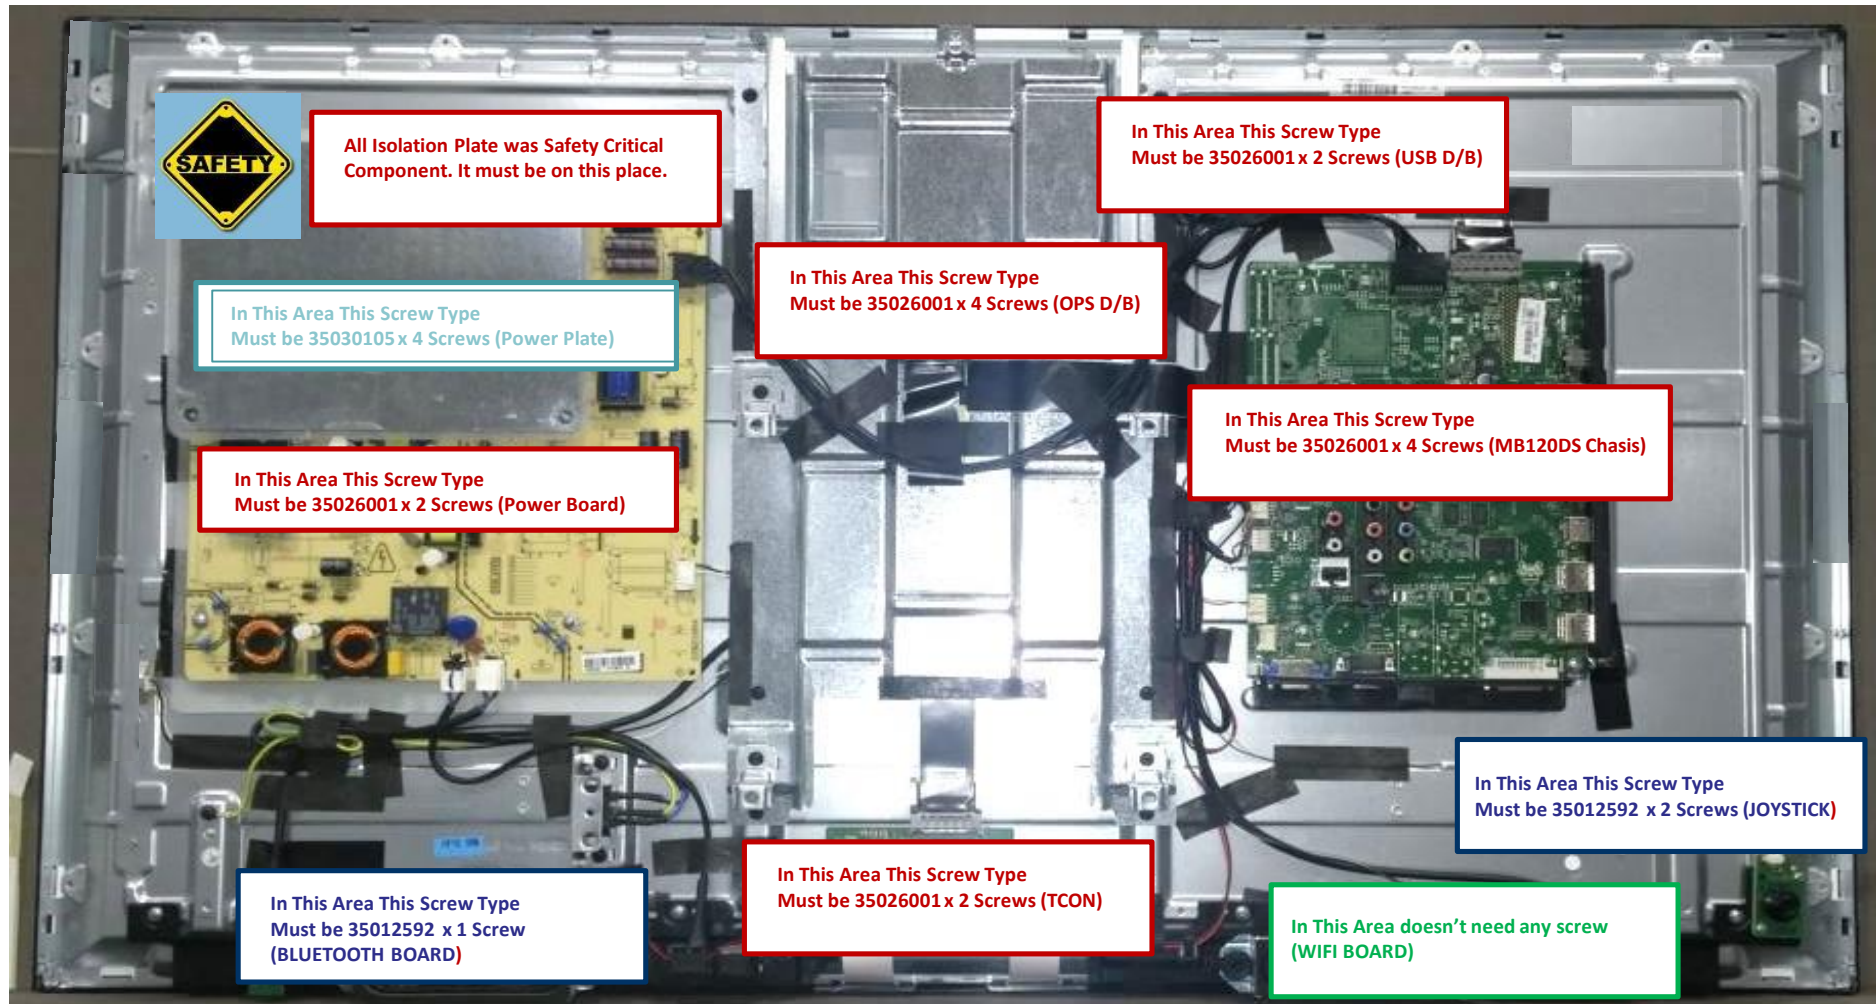

THANK YOU

Vestel Application Engineering Department

HBB - 2017